

PRODUCT-DETAILS

3558E-A00653 04

3558E-A00653 04 Rocker with transparent lens
Switch/push button Single rocker White -
Element



General Information

Extended Product Type	3558E-A00653 04
Product ID	3558E-A00653 04
EAN	8595017233302
Catalog Description	3558E-A00653 04 Rocker with transparent lens Switch/push button Single rocker White - Element
Long Description	For switches 1g1w, 1g2w, intermediate with orientation or indication neon lamp. For push-switches 1a1w, 1a2w with orientation or indication neon lamp.

Technical

Application	Switch/push button
Design Range	Element
Type of Fastening	Clamp
Surface Finishing	Untreated Glossy
Material	Plastic
Model Number	Single rocker
RAL Number	RAL 9003 - Signal White
Color	White
Number of Batteries	0

Environmental

Degree of Protection	IP20
----------------------	------

RoHS Status

Following EU Directive 2011/65/EU and Amendment 2015/863 July 22, 2019

Dimensions

Product Net Width	65 mm
Product Net Height	0.071 m
Product Net Depth / Length	26.3 mm
Product Net Weight	0.02585 kg

Container Information

Package Level 1 Units	twenty pack 20 piece
Package Level 1 Width	0.308 m
Package Level 1 Height	0.069 m
Package Level 1 Depth / Length	0.14 m
Package Level 1 Gross Weight	0.02585 kg
Package Level 1 EAN	8595017233302

Ordering

Minimum Order Quantity	1 piece
Customs Tariff Number	85389099
Country of Origin	Czech Republic (CZ)

Certificates and Declarations (Document Number)

Declaration of Conformity - CE	No declaration needed
Instructions and Manuals	No document needed
REACH Declaration	2CHC663076X0201
RoHS Information	2CHC663076X0201

Popular Downloads

Data Sheet, Technical Information	No document needed
Instructions and Manuals	No document needed

Classifications

ETIM 7	EC000011 - Control element/cover plate for domestic switching devices
ETIM 8	EC000011 - Control element/cover plate for domestic switching devices
WEEE Category	Product Not in WEEE Scope
WEEE B2C / B2B	Business To Consumer
CN8	85389099

Categories

Low Voltage Products and Systems → Switch Assortments → Cover Plates → Switch & Push Buttons

