

Fuse disconnecter EFD 10

INSTALLATION INSTRUCTION


LV-fuse-switch disconnecter

Dimensions [mm]



Installation



CAUTION!
Installation by electricians only!

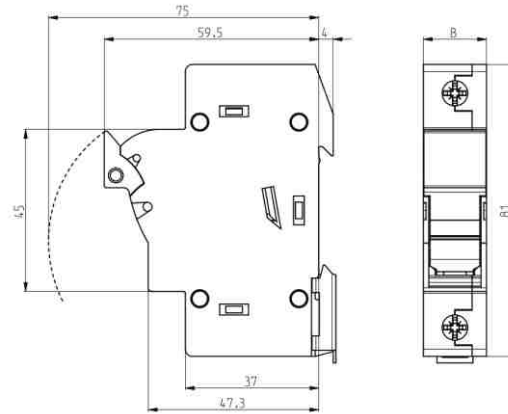


TYPE	1p	1p+N	2p	3p	3p+N
B [mm]	17,5	35	35	52,5	70

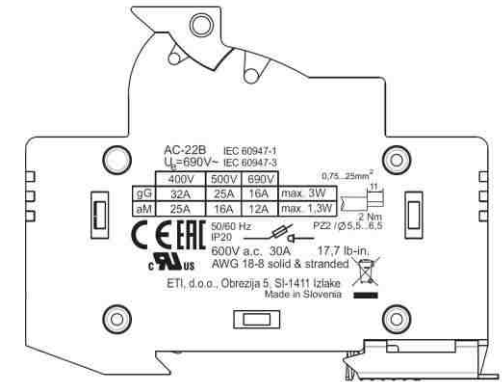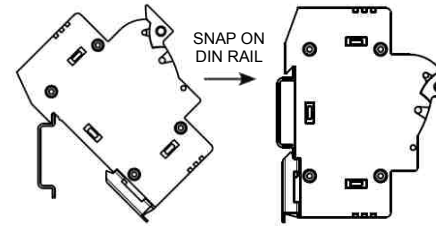

Fuse link replace


Disassembly

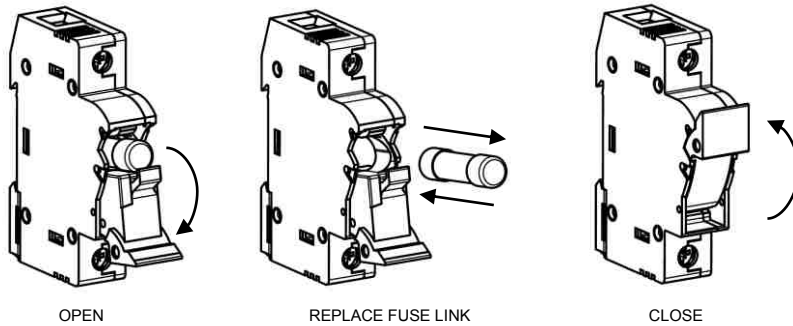

OPEN

REPLACE FUSE LINK

CLOSE

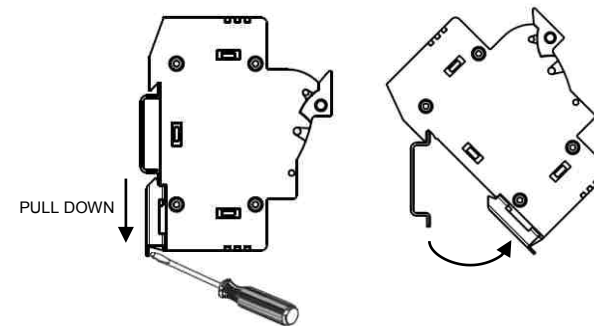

PULL DOWN



ETI, d.o.o.
Obrezija 5
SI-1411 Izlake






Fuse holder EFD 22 3p

LV-fuse-switch disconnecter

Dimensions [mm]

Installation

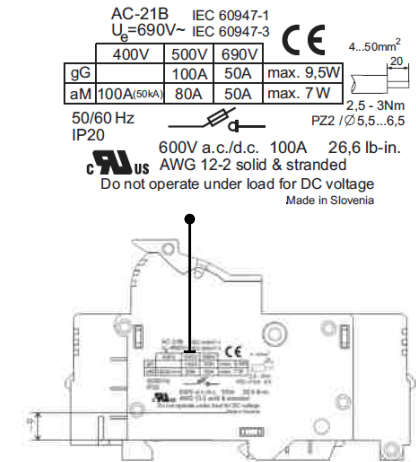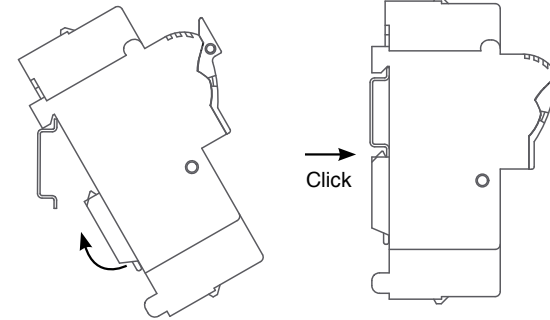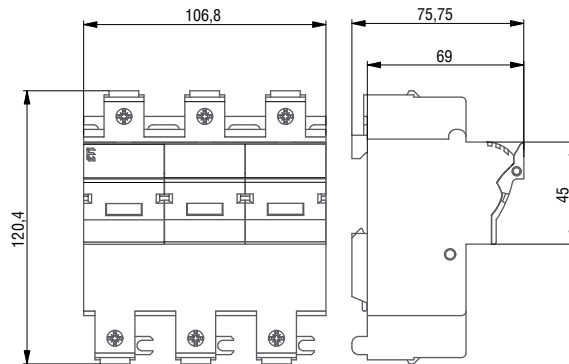

CAUTION!
Installation by electricians only!

Fuse replace

Disassembly

